Horn Guides - driving set - 4 off - Consider tack welding 8mm and 15mm together, before drilling M12. (ensure M12 holes are drilled square and true)

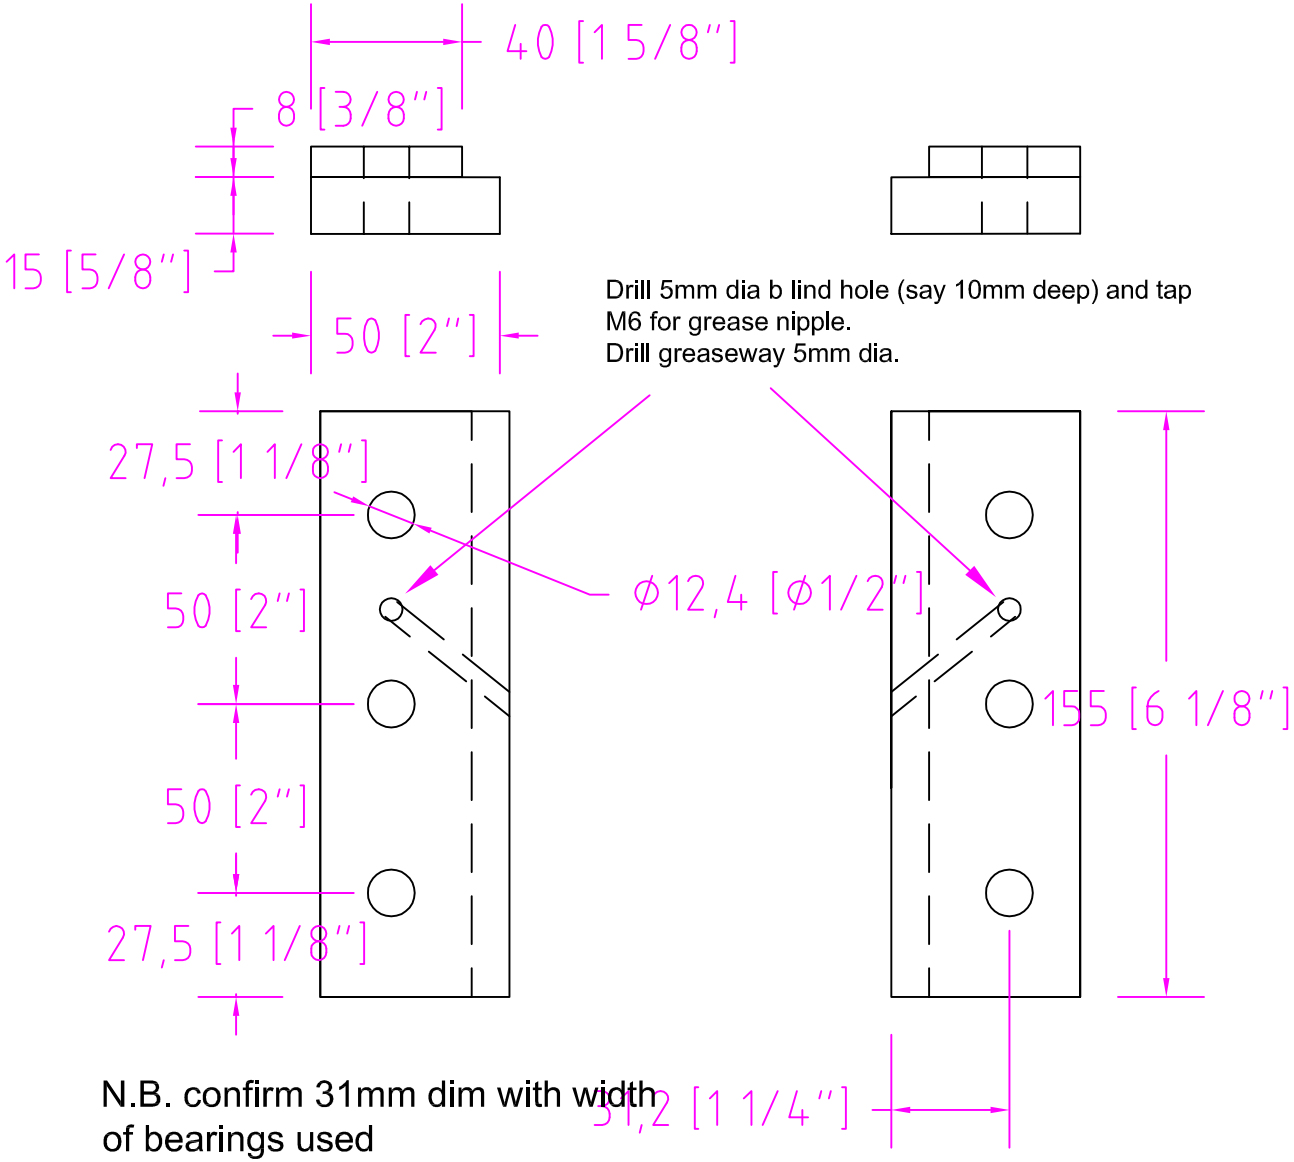

N.B. confirm 31mm dim with width of bearings used

Scale 1 : 2 @ A4